



# Penn Reel Parts list for Model: 130S INTERNATIONAL

KEY PART			KEY PART		
NO	NO.	DESCRIPTION	NO	NO.	DESCRIPTION
1	1-130S	R.S. PLATE ASSEMBLY	56	56C-117	ROD BRACE COMPLETE
2	2-130	QUADRANT RING	59	59-130	SLOTTED WASHER
3	3-130	BRIDGE (INNER)	60A	60A-130	BACKING WASHER
3A	3A-130	BRIDGE (OUTER)	62	62-50	CLICK SPRING
4	4-130	CAM THRUST WASHER	69	69-130	LOCATING PIN
5H	5-130HS	MAIN GEAR HIGH SPEED	69B	69B-130	RETAINING RING
5L	5-130LS	MAIN GEAR LOW SPEED	70	69B-130S	RETAINING RING
6	6-130	DRAG WASHER	81	81-130	RATCHET
6A	6-155	SPACING WASHER	91	91-130	HANDLE SHAFT
7	7A-130	METAL DRAG WASHER	95	95-130	CLICK TONGUE BUSHING
13	13-130s	PINION GEAR	95A	95A-20	CLICK BUSHING WASHER
14	49-710	DOG SPRING	95B	38-710	CLICK BUSHING NUT
15	15-130	DOG	101	101-30	RATCHET SCREW (4 REQ.)
16	16-130	BRIDGE SCREW	101S	101-130S	COUPLING PLATE SCREW (3 REQ.)
16H	16H-130	BRIDGE SCREW (HIDDEN)	110	110-50	QUADRANT SCREW (CENTER)
18	18-130	CLUTCH SPRING	112	112-130	ECCENTRIC LEVER KNOB
19	19-130	ECCENTRIC CAM	112A	112A-130	ECCENTRIC KNOB SCREW
21	21-130	ECCENTRIC CAM LEVER	113	113-130	ECCENTRIC LEVER CAP
23	23-130	HANDLE NUT	117	117-130	DRIVE PLATE (OUTER)
24	24-130	HANDLE COMPLETE	117A	117A-130	DRIVE PLATE (INNER)
26	18-130S	GEAR STUD SPRING	118	118-80S	DRIVE PLATE SCREW (8 REQ.)
27	27-130S	LEFT SIDE PLATE	119	119-130S	COUPLING PLATE
29	29L-130	SPOOL	123	123-50	DRAG COVER SCREW
30	30-130	STAND	124	124-130	BRIDGE COVER (OUTER)
30A	30A-130	DOWEL TUBE	124A	124A-130	BRIDGE COVER (INNER)
31	31-130	STAND SCREWS (4 REQ.)	134	134-130S	GEAR STUD
31S	31-130S	STAND SCREWS (4 REQ.)	134A	134A-130S	INDICATOR BUSHING
33R	33R-130	RINGED ROD CLAMP	134B	134B-130S	BEARING SPACING BUSHING
34	34-130	ROD CLAMP SCREW W/NUTS	140	140-115	FELT WASHER
35	35-130S	CLICK TONGUE	141	141-130	CAM FOLLOWER
36	36-50	CLICK BUTTON	142	142-130	CAM FOLLOWER PIN
36A	36-700	CLICK BUTTON NUT	143	143-130	ADJUSTING SCREW
37	37-130	FRAME POST	144	144-130	PRESET KNOB
37A	37A-130S	SPACER BAR	144C	144C-130	PRESET PINION
38	38-130	POST SCREW (6 REQ.)	144D	144D-130	PRESET GEAR ASSEMBLY
38S	38-130S	POST SCREW (5 REQ.)	156	156-130	DRAG COVER
39	39-130S	LONG QUADRANT SCREW	157	157-130	QUADRANT SPACER BUSHING
41	41-130	LEFT SIDE BEARING SPRING	161	161-130	LOCATING PIN BUSHING
46	46A-704	GEAR RETAINING SCREW	162	162-130	LOCATING PIN SPRING
50	50-130S	SHIELD	171	171-130S	PLUNGER
51	51-130	HANDLE KNOB	172A	172A-130S	PLUNGER PIN
54	54-130	HARNESS LUG	173	173-130S	GEAR RETAINER
54A	54A-130	ROD BRACE LUG	174	174-130S	GEAR STUD PLUG
55	55-130	BALL BEARING			

NOTE: Many of www.pennparts.com schematics include changes that were either made by Penn, or errors found and corrected by our parts dept.  
SBT Ver. 121606

\*154 154-130 Shim, Spool Shaft